

ELLIE

Instructions

These instructions for set-up are relevant for all ELLIE L-bracket models including ELLIE, ELLIE SHORT, ELLIE PD, & ELLIE PD SHORT.



A LOGGED THING[®]



BUILT TO ENABLE. CREATED TO INSPIRE

Look at your box.
See that little sticker
with a serial number
and a barcode? Peel
it off and put it here
for safe keeping.

Or don't.

IMPORTANT

DO NOT USE YOUR L-BRACKET
UNTIL YOU HAVE READ
THESE INSTRUCTIONS. NO
WARRANTY CLAIM WILL BE
ENTERED INTO FOR THE MISUSE
OR INCORRECT USE OF THESE
PRODUCTS.

Here's how to set up your Ellie Universal L-Bracket for use:

1 - Base plate – can be used on its own

2 - Vertical Aspect with gap for improved cable access

3 - Extender bars to create the optimal base length

4 - 1/4"-20 stainless steel mounting screw

5 – Dual ended mini tool with Allen keys



Base plate (1) can be used as a long Arca-Swiss quick release plate on its own. Sloped Edge should be at the back of the camera, with the rubber pads against the bottom of the camera. Strap attachment slot to the side of the camera nearest the hand grip.

Fit the stainless steel mounting screw (4) into one of the two slots in the base plate. Select the optimum position to allow access to the battery or memory card compartment where possible.

To add the vertical aspect (2), use the mini tool (5) to loosen the two hex screws in base of Ellie.



Choose the best position for the space in the vertical aspect, considering the ports in the side of the camera.

Pass the extender bars (3) through the holes in the base of the vertical aspect and screw into place.

Insert the extender bars (3) into the side of the base plate. Position the vertical aspect so it sits against the side of the camera (or in your preferred position), with side ports accessible. Tighten the screws in the base to hold the extender bars firmly in place. The extender bars should not be able to move when Ellie is in use.



If access to the side ports is blocked, loosen the mounting screw in the base plate, and adjust the position of Ellie, forward or backward, for optimal access.



Once you have positioned Ellie correctly for your camera, check the camera mount screw, extender bars, and base screws are all fully tightened before use.

Ellie can be used as a type of rocker mount on a tripod's ballhead. To use as a rocker, remove vertical aspect, attach to base plate to create a downward L shape, tighten all screws in place.

On tripod, position the ballhead with the clamp in portrait position. Attach Ellie to your camera or lens mount, then clamp Ellie's vertical aspect to the tripod head with the base plate and camera upright. Maintain a firm hold on the camera until Ellie is securely tightened in place.



DO...

Choose the right slot in the base plate for your camera.

Position the space in the vertical aspect to best accommodate cables attached to the side ports.

Use the slots at the top of the vertical aspect, and the end of the base to attach your camera strap.

Use the 1/4"-20 threads in the top of the vertical aspect to attach accessories like accessory arms, microphones and lights.

DON'T...

Do not attach single-mount sling straps to the vertical aspect of the L-bracket.

Do not use the L-Bracket without first tightening the screws in the base plate and vertical aspect, and checking the camera is secure.

Do not let go of your camera when attaching to tripod, until you are sure it is secure.

3LT Social Media



#3LeggedThing
/3LeggedThing
@3LeggedThing



Unit 9 Kinsbourne Farm
Bury End
Stagsden
Bedfordshire
MK43 8TS
United Kingdom of
Fadeless Splendour