LEGENDS RANGE TRIPODS

TOMMY

INSTRUCTION MANUAL

3 Legged Thing®

BUILT TO ENABLE. CREATED TO INSPIRE.

Look at the end of your box. See that little sticker with a serial number and a barcode? Peel it off and put it here for safe keeping.

Or don't.

IMPORTANT

DO NOT USE YOUR TRIPOD UNTIL YOU HAVE READ THESE INSTRUCTIONS. NO WARRANTY CLAIM WILL BE ENTERED INTO FOR THE MISUSE OR INCORRECT USE OF THESE PRODUCTS.

ANATOMY OF A TRIPOD:

We offer three leg angles that we consider to be optimum for using a tripod. They are 23˚, 55˚ & 80˚. Each angle has its own merits.

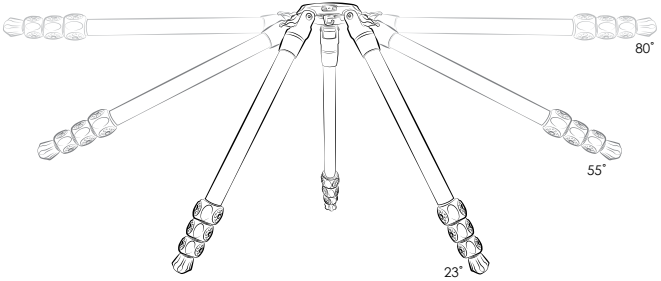

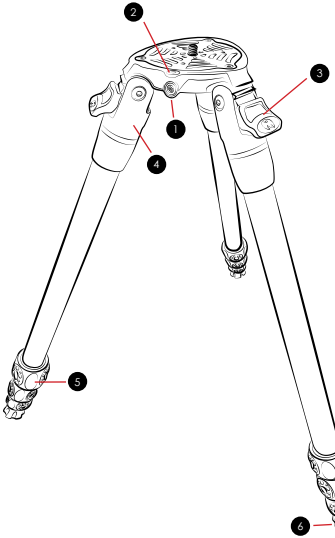

1. 1/4"-20 accessory thread
2. Bubble Level
3. Rapid Latch
4. Hinge
5. Twist Lock (Leg)
6. Bootz / Footwear
7. Flat plate with 3/8"-16 thread
8. Hook (under plate)
9. 2mm grub screws to help secure larger tripod heads
10. 75mm bowl mount
11. 2.5 mm plate screws

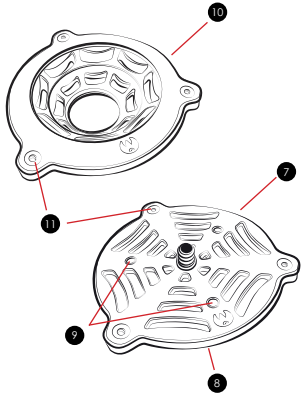

Interchangeable plates

Nicky and Tommy come complete with both flat plate and bowl mount options. To swap these over, use the mini tool (a) to unscrew the hex screws (b) swap the plates over and screw the hex screws back in place until they are tight.

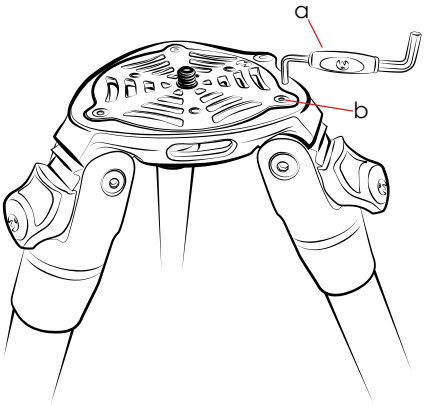

Bag attachment

If you are using the flat plate and wish to attach the carry bag for extra ballast, clip the bag on to the hook on the underside of the flat plate using the carabiner at the end of the bag.

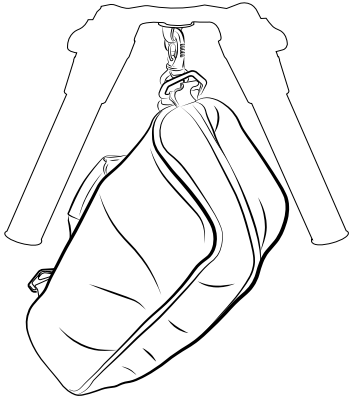

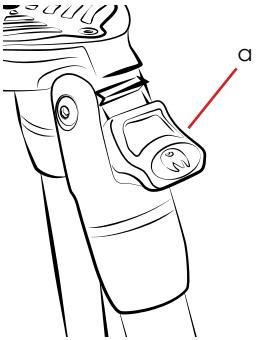

Legs, catches & locks

In order to change the leg angle or to stow away your tripod you will need to press down on the Rapid Latch (a) manoeuvre the leg into the desired position and then release the catch.

To open and extend the tripod legs simply grip the twist locks in your hand, quarter turn, loosening the legs allowing you to select a desired height. Once the required height has been obtained, lock the legs in place by rotating back to the original position, which will fully engage the leg lock. The friction locks do not require to be undone further than a half turn, unless you intend to completely disassemble the legs for cleaning.

Cleaning

Never use WD40 on your tripod as it can be a solvent.
Always use silicone grease.

It is advised that you wash your tripod after using it in salt water, sand, dirt or mud and this can be done by undoing each leg. Take each individual leg lock and unscrew until completely undone, and gently pull the tubing (a) out, being careful not to lose the nylon shim (b) (chicken lips), allowing you to clean the threads of the legs. Once cleaned, dry all the parts with a clean cloth. Do not leave them to air dry. Then ensure that the chicken lips are in place and then carefully insert the leg, lining up the internal slot with the gap (c) in the chicken lips, and tighten the leg lock in place.

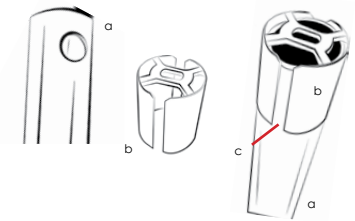

Detachable Legs

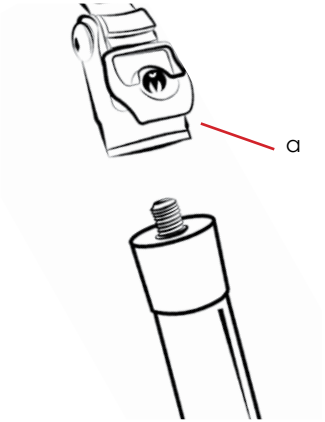

All three legs can be unscrewed directly from the leg hinge (a) and used as monopods or boom arms.

The three detachable legs give you the option to convert to a table-top tripod. Un-screw all three legs directly from the hinge(a). Screw your choice of footwear* into the thread where your legs were previously attached. Ensure your footwear is screwed in tightly at all times to prevent losing them.

With Nicky and Tommy, we recommend using the flat plate for this set up to allow you to attach a tripod head

*Footwear sold separately

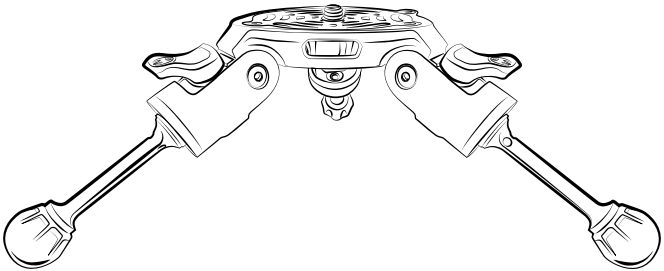

Warranty Information

Your 3LT product comes with a 5 Year Global Warranty. On the box you will find a sticker with a unique barcode and serial number. Use this serial number to register your products at www.3leggedthing.com/register.

Details of your warranty can be found at www.3leggedthing.com. Your warranty covers 3 Legged Thing products only.

If you have a question or suspect you have a fault, contact us first at www.3leggedthing.com/support.

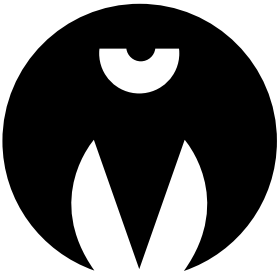

3LT Social Media

#3LeggedThing
/3LeggedThing
@3LeggedThing

3 Legged Thing

Unit 9 Kinsbourne Farm
Bury End
Stagsden
Bedfordshire
MK43 8TS
United Kingdom of
Fadeless Splendour